 


USER'S MANUAL

I. PRODUCT DESCRIPTION

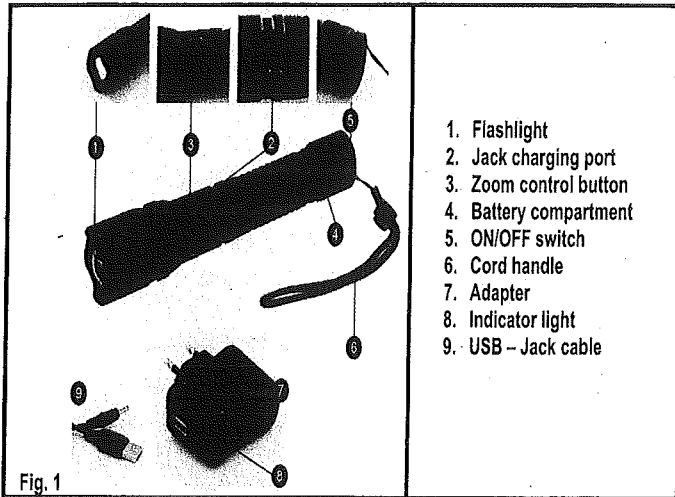

1. Flashlight
2. Jack charging port
3. Zoom control button
4. Battery compartment
5. ON/OFF switch
6. Cord handle
7. Adapter
8. Indicator light
9. USB – Jack cable

Fig. 1

II. BATTERY CHARGING

- Check the rechargeable battery is inserted properly (see figure 3).
- Connect the USB – Jack cable (9) with the adapter (7) and the torch.
- Plug the Adapter (7).
- The indicator light (8) is red during battery charging and it becomes to green after full charging.
- Unplug the adapter and USB – Jack cable (9) after full charge. And then, close the jack charging port (2).

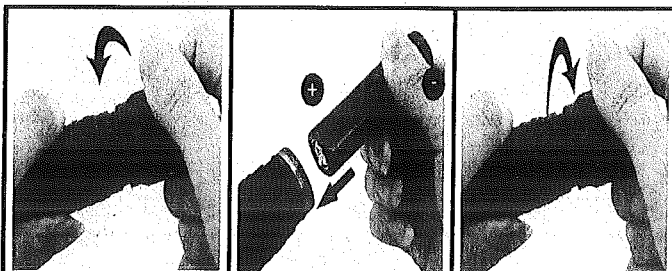


Fig. 2: Open the battery compartment

Fig. 3: Insert the battery, making sure the positive (+) and negative (-) terminals are correctly positioned.

Fig. 4: Close the battery compartment

III. OPERATING INSTRUCTION

ON/OFF

- Press the ON/OFF switch (5) once to turn on HIGH light of the torch.
- Press it again to turn off.
- Press the ON/OFF switch (5) once to turn on LOW light of the torch.
- Press it again to turn off.
- Press the ON/OFF switch (5) once to turn on SOS light of the torch.
- Press it again to turn off.

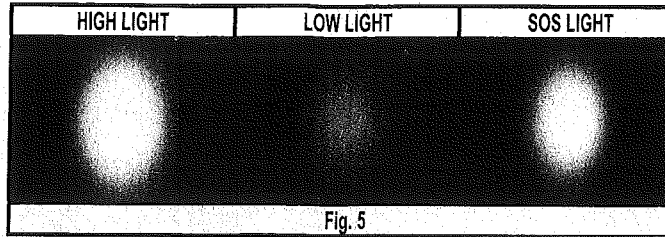


Fig. 5

BEAM ANGLE CHANGING

When the torch is turned on, press the zoom control button (3) to adjust the beam angle. Press it again to stop the adjustment. Press it another time to re-adjust the beam angle. The beam angle of the flashlight zoom can be adjusted from narrow beam to wide beam thanks to its built-in zoom.

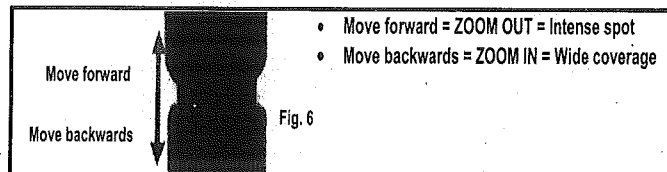


Fig. 6

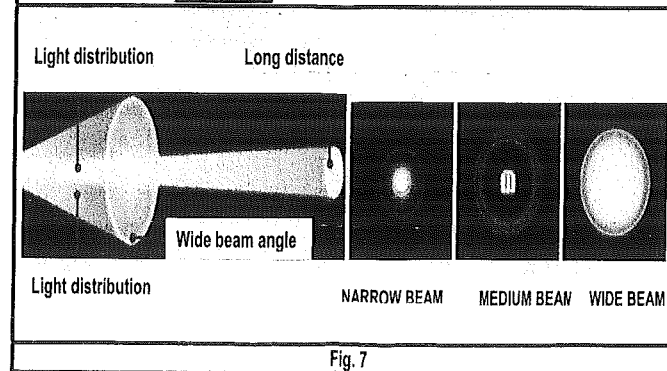


Fig. 7

IV. SAFETY WARNINGS



ATTENTION: In any case, never look directly at the LED without eye protection.

V. SPECIFICATIONS

- Power: 1x18650 rechargeable battery, 3.7V 2200mAh.
- LED: 3 Watts.
- Charging time: 8 hours charging for the first three times and then approximately 2.5 hours.
- Autonomy (approx.): 3.5 hours.

VI. CARE AND MAINTENANCE

- The torch is not designed for underwater use. If your torch is accidentally submerged or exposed to extremely wet conditions, dry out any water that might have immersed before using it again.
- Do not store battery in the light for long periods of time; they may leak and damage the torch.

VII. WARNING ON BATTERIES

- Never mix alkaline, standard (carbon-zinc) and rechargeable (nickel hydride).
- Don't mix new and used batteries.
- Don't attempt to recharge non rechargeable batteries.
- Remove rechargeable batteries from the device (if possible) before charging them.
- Rechargeable batteries must always be recharged under adult supervision.
- Remove used batteries.
- Never short the power supply terminals.
- Always use the recommended or equivalent battery types.
- Always pay attention to battery polarity.



WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

If the power cable is damaged, it must be replaced by the manufacturer, his after sales service, or a person qualified in this area in order to avoid any accidents arising.

Marketed by EUROTUPS VERSAND GMBH D-40764 LANGENFELD