

Battery Operated Nail Grinder – Art. 20 191

Instruction Manual

1. Product Overview



2. Operating

1. Open the battery compartment cover (5), insert 2pcs 1.5V AA alkaline batteries (not included). Pay attention to the proper polarity of the batteries (Fig.1). Then close the battery cover.
2. Press and hold the On/Off switch (3) and slide it forward to turn on the grinder.
3. Hold the grinder with one hand and lead it to the position which is parallel to your fingernail.
4. Move the grinding tool (7) evenly, slowly and with little pressure alongside the fingernail. Lead the grinding head (8) in semi-circle movements around the fingernail (Fig.2) to grind and polish the nail.


The grinding result depends on the speed, intensity and duration of the treatment.

5. Push the On/Off switch (3) back to turn off the device.

6. After each use, put the protective cover (1) back on the grinding head.



(Fig.1)

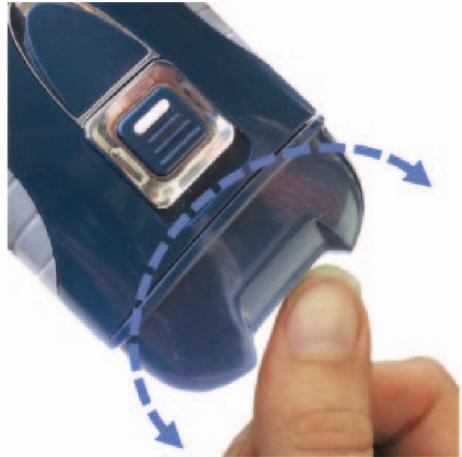

(Fig.2)

3. Cleaning

1. Do not clean the housing of the device with abrasive or aggressive chemicals because this can damage the surface. Only clean the unit with a lightly moistened cloth.

2. Make sure that no liquid enters the interior of the device. Do not clean the grinding head (8) with water.

3. Press the releasing key (2) that is located below the grinding head and carefully detach the grinding head (8) from the unit. Use the supplied cleaning brush (6) to remove the abraded nails. Then reattach the grinding head to the device. (see Fig.3)



(Fig.3)

4. Safety Notes

Please note the following safety notes to avoid malfunctions, damage or physical injury:

1. Use this device only for grinding or polishing your fingernails or toenails.

2. Keep it out of reach of children. **IT IS NOT A TOY.**

3. If you do not use the unit for extended periods of time, take out the batteries.
4. Do not expose the unit under direct sunlight, humidity, dirt, extreme temperature, strong light or strong magnetic environment. Do not allow liquid to enter the housing.
5. Do not disassemble and modify the unit or attempt to repair it yourself. It does not contain the parts serviceable for you.

DISPOSAL

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH
Elisabeth-Selbert-Straße 3
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany	0180 . 530 63 63* or info@eurotops.de
in Austria	01 . 230 60 43 12 or info@eurotops.at
in Switzerland	044 . 28 36 125 or info@eurotops.ch
in the Netherlands	026 . 37 36 333 or info@eurotops.nl
in France	0892 . 700 470** or info@eurotops.fr

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 10.12.2012