
## **BK468**


# INSTRUCTION MANUAL

## PLEASE READ THE MANUAL BEFORE YOUR FIRST USE. KEEP THIS MANUAL SAFE FOR FUTURE REFERENCE!

## DESCRIPTION

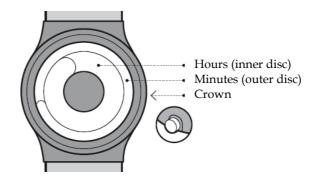


#### **READING THE TIME (EXAMPLES)**

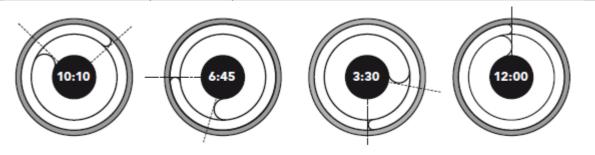


TIME SETTING




- 1. Pull out the crown (the watch stops).
- 2. Turn the crown until you reach the correct time.
- 3. Push the crown back in to confirm and finish.

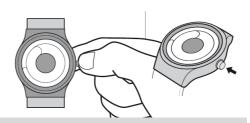


**CLASP ADJUSTING** 

 

1. Open the clasp.

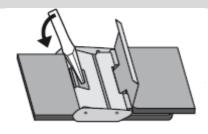


 2. Place a small tool like a screwdriver in the slot to lift the bar according to the image.




3. Shift the buckle to the desired position. Then close and press the bar into the initial position.

## SECURING THE CLASP

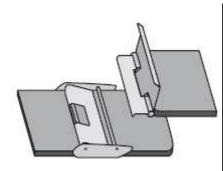



 

2. Hook it into the pin.

3. Close the clasp.

## **TECHNICAL DATA**

- Battery: 1\*SR626SW, 1.5V ----
- 3 ATM

# WARNING

- Always make sure the crown is fully return to the case to ensure water resistance.
- DO NOT operate the crown or buttons in water or when the watch is wet.
- To prolong the appearance of your watch, avoid contact with the following :Perfumes, hairspray, cosmetics, detergents, adhesives and paints as they cause discoloration, deterioration and damage.
- To help prevent possible damage from perspiration, dust and moisture, periodically wipe your watch with a soft dry cloth.
- To ensure lasting durability please take note of the following points: Never attempt to open the case of your watch. Batteries should be replaced by a qualified technician.
- Your watch is shock resistant, however please be careful not to drop or hit your watch against hard surfaces, as this will cause damage.

# WARNING ON BATTERIES

- Never mix alkaline, standard (carbon-zinc) and rechargeable (nickel hydride).
- Don't mix new and used batteries.
- Don't attempt to recharge non rechargeable batteries.
- Remove rechargeable batteries from the device (if possible) before charging them.
- Rechargeable batteries must always be recharged under adult supervision.
- Remove used batteries.
- Never short the power supply terminals.
- Always use the recommended or equivalent battery types.
- Always pay attention to battery polarity.

Marketed by EUROTOPS VERSAND GMBH D-40764 LANGENFELD,

Germany Made in PRC