

KNIFE SHARPENER

MANUAL

IMPORTANT SAFEGUARDS




This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are supervised.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric hazard and injury to persons, including the following:

1. Children should be supervised to ensure that they do not play with the appliance.
2. To protect against electrical shock, do not place this unit in water or other liquid. See instructions for cleaning.
3. Close supervision is necessary when any appliance is used by or near children.
4. Must be unplugged after use or before cleaning, and clean the appliance until completely cool off.
5. The use of accessory attachments not recommended by the appliance manufacturer may be hazardous.
6. Do not use outdoors or while standing in a damp area.
7. Do not let cord hang over edge of table or counter, or touch hot surfaces.
8. Do not place on or near a hot gas or electric burner, or in a heated oven.
9. The appliance is with cord and plug; plug in and press on to start up, press off to stop operation.
10. Do not apply other attachments to the appliance.
11. A fire may occur if covered or touching flammable material, including curtains, draperies, walls, etc., when in operation.

Save this manual, the product is for household use only!

PRODUCT DESCRIPTION

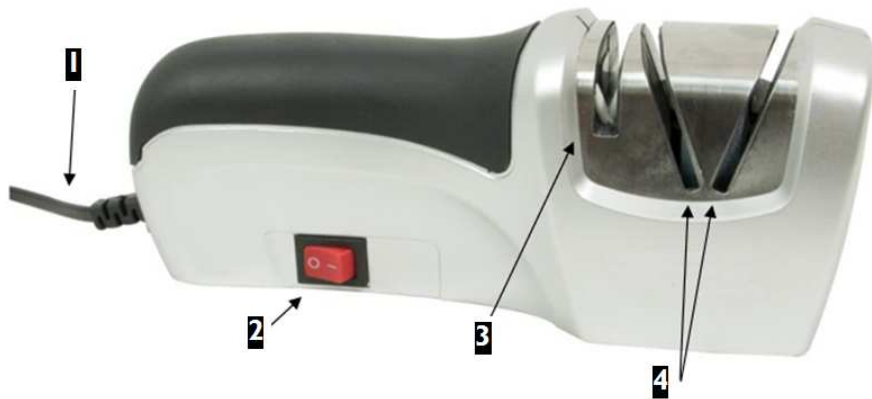

No.	Description	No.	Description
1.	Power cord	3.	Manual sharpener
2.	ON/OFF switch	4.	Electric sharpener

OPERATING INSTRUCTIONS

IMPORTANT SEFETY INFORMATION

- Do not press hard against the concave section when sharpening. There are times when you may injure your hand due to excessive pressing.
- Do not sharpen by applying water or oil. The grindstone will be subjected to loading and sharpening can not be made.
- Provide sufficient care in handling and do absolutely not allow children its usage.
- Inspect product regularly for signs of damage.
- Do not use a damaged product
- Be sure to completely wipe off water, oil and fouling on cutleries.
- Refrain from interruption cutlery sharpening or changing the sharpening pressure as it may lead to causing blade unevenness.
- Always disconnect and store the device after each use.
- Note: Never sharpen a dirty knife. This could cause your appliance to malfunction.

ELECTRIC SHARPENING (Step 1)

- Place the appliance on flat, safe surface.
- Insert the plug into the mains power supply socket.
- Switch on at the mains power supply socket.
- Turn the appliance on at the ON/OFF switch.
- Hold the knife securely by the handle as you would in normal usage and position the heel of the blade over one of the slots.
- While holding the blade parallel to the table, lower the heel of the blade until contacts the synthetic sharpening wheel3.
- As soon as you hear the grinding sound, pull the blade at a consistent speed through the sharpening slot using light, downward pressure.

MANUAL SHARPENING (Step 2: Finishing)

- Hold the blade parallel to the table and centre the heel of the blade in the bottom of the crossed ceramic rods.
- Starting at the heel of the blade, pull the blade through the crossed ceramic rods while applying light, downward pressure.
- Repeat this process until your blade is sharp.
- To sharpen the tip of the blade, lift up on the knife handle slightly as the curved portion of the blade is drawn through.

NOTE

- The speed at which you pull the blade through the sharpening slots will determine the amount of metal removed from the edge. A very slow pass will remove more metal than a quick pass. When drawing the blade through the slots, allow approximately one second for each two inches of blade.
- Move the other sharpening slot and repeat the process to sharpen the other side of your blade.
- For best results, repeat the same number of strokes for each side of the blade. Continue alternating the blade between the two slots.
- To sharpen the tip of the blade, lift up on the knife handle slightly as the curved portion of the blade is drawn through the blade guides.

CLEAN AND CARE

- Unplug the unit after each use.
- Do not clean the base under running water or wash in a dishwasher. Clean this part with a damp cloth.
- Do not hit the grinding wheel, otherwise it is easily damaged.
- The cord must be repaired by professional manufacturer or service center if damaged.
- Store the sharpener in a dry place free from water splashes.

SPECIFICATIONS

- Power: 230V ~ 50Hz
- Rated power consumption : 10W



WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

If the power cable is damaged, it must be replaced by the manufacturer, his after sales service, or a person qualified in this area in order to avoid any accidents arising.



Marketed by EUROTUPS VERSAND GMBH D-40764 LANGENFELD, Germany
Made in PRC