 


## Battery-free Wireless Doorbell

Cat. No.: 27783

Before operating, please read this manual carefully. Please follow the instructions to operate properly.

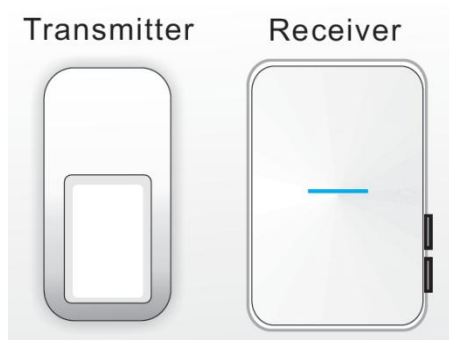

### 1. Important

- 1) Do not get the receiver wet.
- 2) Do not disassemble, repair or modify.
- 3) Please screw in securely.
- 4) Do not exceed electrical ratings.

### 2. Attention



- 1) Avoid locating Transmitter/Receiver on or directly near metallic surface as this may reduce the operation range.
- 2) When locating Transmitter onto a UPVC door frame, always check the operating performance before final installation.

### 3. Pack Contents

Transmitter x1, Receiver x1, Adhesive Pad x1, User Manual x1, Screws x 2

### Installation Instruction

 


Please run a test before installation.

#### 1) Receiver

Plug the receiver into the outlet. The receiver will perform better if keeping it away from electric equipment.

Try adjusting the location of the receiver according to the "Range Guide".

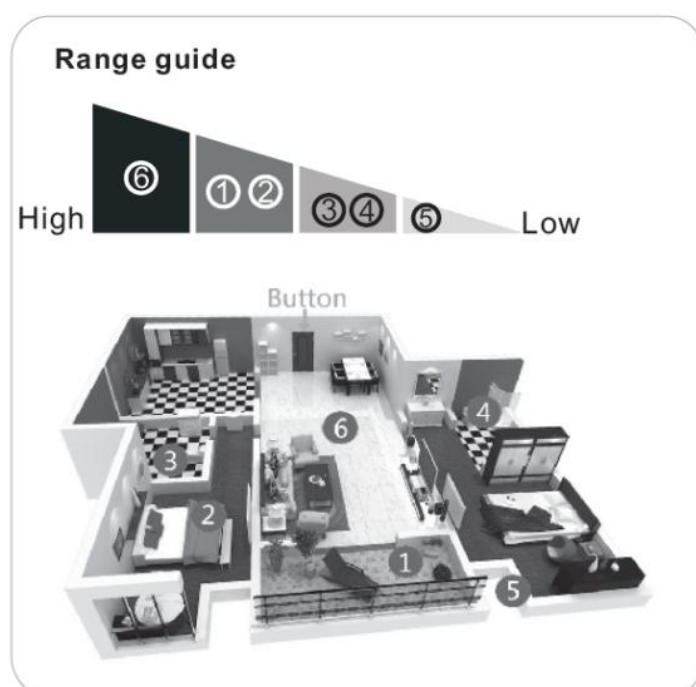


## 2) Transmitter

Clean the surface where you intend to mount the transmitter and the back of the transmitter.


Before mounting the transmitter, please run a test. Put receiver and transmitter where you want to mount. Close all doors when you test. If the receiver does not sound, please see-Trouble Shooting.
 
### A. Mount the transmitter with screws

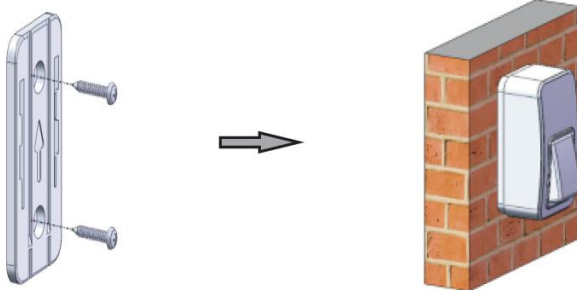


1. Place the button mounting base on the required place of the wall screw the two screws into it.
2. Carefully push the button down to the stop.

### B. Or mount the transmitter with adhesive pad

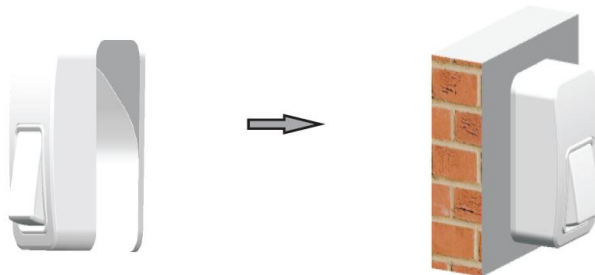 

1. Stick the transmitter to the wall by adhesive pad.
2. Press the transmitter for 30 seconds.

### Operation Instruction

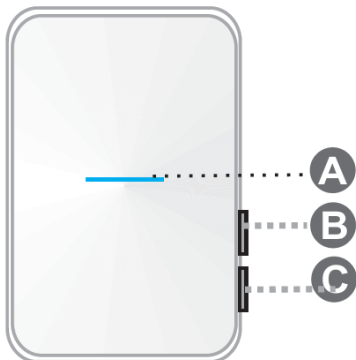 

- A** Indicator Light
- B** Button **B**
- C** Button **C**

#### ● Adjust sound volume

Short press Button C on the side of the unit to cycle through 3-class sound volume.

#### ● Silent Mode

Long press Button C for 5 seconds, the indicator light will blink. After 3 seconds of blinking, the receiver will enter into silent mode.

Press Button B or C to exit silent mode.

#### ● Select a ring tone

Short press Button B on the side of the unit to cycle through 25 ring tones. Leave it on whichever ring tone you like.

Re-plug the Chime, the tune will become “Ding Dong Ding Dong”

● **Learn Mode**

 
Short press Button B on the side of the unit for 5 seconds until the indicator light blink to enter learn mode.

Press the transmitter twice .The receiver will ring with indicator light A blink to confirm that transmitter has been paired to the Receiver.

Door chime kit will exit learn mode automatically.


Note: Short press the Transmitter twice, the Receiver will exit learn mode.

**3) Add Additional Transmitter**

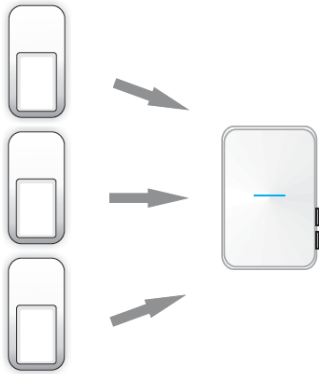

Following the instructions in Learn Mode, pair each additional transmitter to the receiver. Note: Maximum of 3 transmitters can be learnt to a single receiver.

**4) Add Additional Receiver**

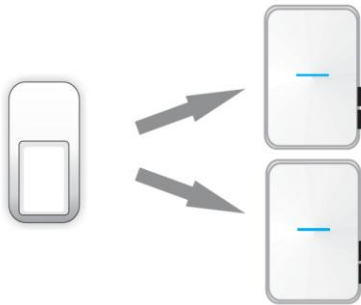 

Following the instructions in Learn Mode, pair each additional receiver to the transmitter. Note: No limit to the number of receivers.

**Trouble shooting**

<b>Receiver does not sound.</b>	<ol style="list-style-type: none"><li>1. Make sure the receiver is plugged in.</li><li>2. Make sure the transmitter has been synchronized with receiver.</li></ol>
<b>Indicator light off</b>	<ol style="list-style-type: none"><li>1. Make sure receiver is plugged in.</li><li>2. Check if receiver is in Learn Mode.</li></ol>
<b>Reduced range</b>	<ol style="list-style-type: none"><li>1. Metal structures, including door frames, can result in reduced transmission range. Avoid mounting transmitter or receiver on or near metal structures.</li><li>2. Other electric equipment can cause radio interference that affects your receiver.</li><li>3. Walls, doors and ceilings will reduce the range.</li></ol>

Attentions: If the issue is still not resolved by the above methods, please unplug the receiver and wait for about 3 seconds till the indicator light off, then re-plug it in. If that does not solve the problem, please contact customer service.

## Specifications

Specifications	Receiver	Transmitter
Power Supply	AC 100-240V	Self-powered
Operating Temperature	-10°C ~ +40°C	-20°C ~ +50°C
Working range	110m (open area)	
RF Frequency	433MHz	
Sound Level	85dBA@3ft(1m)	-
Power Consumption	<280mW	-
Water Proof	-	IPX7
Operating Forces	-	10N
Dimensions	78X50X65 mm	79X44X32 mm
Weight	75 g	62 g
Ring Tone	25 polyphony ring tones	-

## Declaration of Conformity

EUROtops Versand GmbH . Elisabeth-Selbert-Strasse 3 . D-40764 Langenfeld.

*EUROtopsVersand GmbH hereby declares that this mobile cabinet light with light switch is in compliance with the essential requirements and other relevant provisions of R&TTE Directive 1999/5/EC.*

*A copy of the dated and signed Declaration of Conformity is available on request via:*

[info@eurotops.de](mailto:info@eurotops.de)

[www.eurotops.de](http://www.eurotops.de).

## DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH  
Elisabeth-Selbert-Straße 3  
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany 0180 . 530 63 63\* or [info@eurotops.de](mailto:info@eurotops.de)

in Austria 01 . 230 60 43 12 or [info@eurotops.at](mailto:info@eurotops.at)

in Switzerland 044 . 28 36 125 or [info@eurotops.ch](mailto:info@eurotops.ch)

in the Netherlands 026 . 37 36 333 or [info@eurotops.nl](mailto:info@eurotops.nl)

in France 0892 . 700 470\*\* or [info@eurotops.fr](mailto:info@eurotops.fr)

\* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

\*\*34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.