


LED WALL CLOCK "PINTURA"
Art.nr. 27820

INSTRUCTION MANUAL

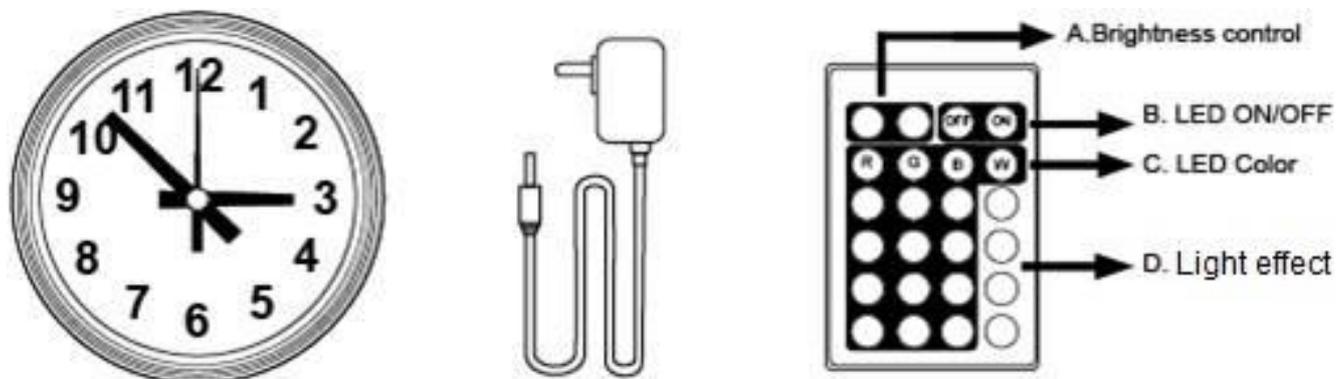

Accessory: Adaptor X 1pc, Remote control X 1pc


Operation:

1. Put 1X AA battery into clock battery compartment.
2. Adjust the clock to correct time (PIC 1.).
3. Insert the plug into the bottom of the clock jack (PIC 2.).
4. Set light color, brightness and flash speed by remote control.


Notes:

1. Button A controls single color only, not for flash, strobe, fade and smooth.
2. Flash button is for 7 colors changing
3. Smooth button is for 3 colors changing
4. Button C is for single color selection

PIC 1.

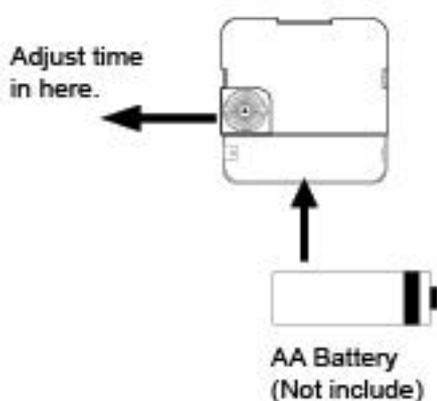

PIC 2.

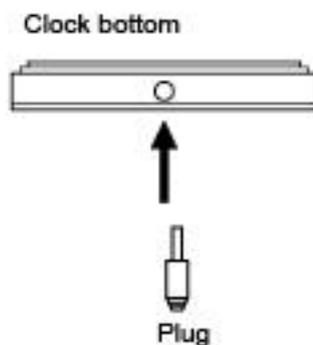

Disposal:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH
Elisabeth-Selbert-Straße 3
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany 0180 . 530 63 63* or info@eurotops.de

in Austria 01 . 230 60 43 12 or info@eurotops.at

in Switzerland 044 . 28 36 125 or info@eurotops.ch

in the Netherlands 026 . 37 36 333 or info@eurotops.nl

in France 0892 . 700 470** or info@eurotops.fr

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 01.03.2016