I. PRODUCT DESCRIPTION


- A. Handle
- B. LED
- C. Adjustable Switch



II. PRODUCT FEATURES

• Uses 4 AA or LR06 batteries, 1.5V each (not included)

III. BATTERY INSTALLATION

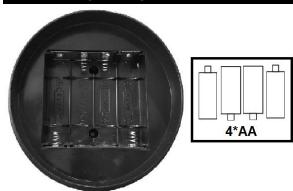

- Open the battery compartment at the bottom.
- Insert 4AA or LR06 batteries, and replace the cover.

IV. USE

- Press deep down to turn on the lamp.
- Press lightly to the low bright mode.
- Press lightly again to flash (Strobe) mode
- Press lightly a third time to return back to the high bright mode.
- Press deep down to turn off the lamp.

V. WARNING ON BATTERIES

- Never mix alkaline, standard (carbon-zinc) and rechargeable (nickel hydride).
- Don't mix new and used batteries.
- Don't attempt to recharge non rechargeable batteries.
- Remove rechargeable batteries from the device (if possible) before charging them.
- Rechargeable batteries must always be recharged under adult supervision.
- Remove used batteries.
- Never short the power supply terminals.
- Always use the recommended or equivalent battery types.
- Always pay attention to battery polarity.

WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.



This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol. If the power cable is damaged, it must be replaced by the manufacturer, his after sales service, or a person qualified in this area in order to avoid any accidents arising.