



1. LED Lights to Indicate 24 Time Zones
2. Push Button for selection / setting

REPLACEMENT DE LA PILE

- Replace the batteries if the watch stops running or the LEDs become dim.
- Replacement of battery should only be done by professional service personnel to ensure the time accuracy and reliability of the water resistance of the watch.
- Replace battery type CR 2025 or equivalent.



The European directive 2012/19/EC about electronic and electric waste, requires that you can't throw away defective domestic appliance with common waste. Used device has to be collected separately to optimize the recuperation rate and the recycling of the materials to reduce the impact on the health and the environment.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or by persons lacking in experience or knowledge, unless they are supervised or instructed on the use of this apparatus by a person responsible for their safety. Children should be supervised to ensure they do not play with this appliance.

Precision and precautions about the battery use

- Throwing away a used battery in the environment or with household waste pollutes and avoids the recuperation of reusable materials.
- It is important to limit the battery consumption and to respect the following rules:
- Favor alkaline battery (last longer than saline battery) and when it's possible use rechargeable battery.

FEATURES

User selects the designated UTC (Coordinated Universal Time) time zone and the hour and minutes hands will advance automatically to show the corresponding time. The 24 flashing LEDs indicate the 24 main cities within the 24 respective time zone. For example : London (Greenwich Time : reference meridian), Paris/Berlin : +1h, Cape Town : +2h...

OPERATING INSTRUCTIONS

The watch is installed with a battery and is in normal running condition. In normal running condition, the watch shows current local time (hour and minutes). It is set up in this way, by default, when purchasing. All settings are done with pressures on the button.

WORLD TIME ZONE SELECTION

1. Press the button once, and the LED lights will turn on and scroll for one round until the last one flashes, which represents the selected time zone. (The flashing LED will turn off after 3 seconds and return to normal running condition if there is no further activated command)
2. When the LED is flashing (duration is approximately 3 seconds), quickly press the button again to select other time zones. Each pressure on the button will advance the LED to the next time zone. Once the right time zone chosen, wait 3 seconds. The hour and minute hands will automatically run to the corresponding time and the designated LED will flash until the time adjustment is complete, then the LED will turn off after 3 seconds and returns to normal running condition.

TIME SETTING

Before setting the hour and minute of local time, please check and if necessary, set the correct local time zone first :

1. PRESS and HOLD the button for approximately 3 seconds until the LED representing the local time zone flashes.
2. When the LED is flashing, PRESS and HOLD again the button for about 3 seconds, until the LED representing the selected time zone moves from flashing to stay on position. That means you just entered to the time setting mode
3. From the moment the LED stays on, two setting modes are possible :
 - 3.1. Minute by minute mode when the LED stays on : a brief pressure on the unique setting button will advance the minute hand of one minute.
 - 3.2. Fast mode when the LED stays on : press and hold again the button for about 3 seconds until the time streams quickly. You can then release the button. For stopping the fast mode, a brief pressure on the unique setting button is enough. Achieve your precise setting using the minute by minute mode. (see 3.1)

Once the hour and minute is set correctly, wait for about 8 seconds for the watch to exit the setting mode. If in any time the button is not pressed for 8 seconds, the watch will return to normal running condition automatically.

Repeat from step 1. If a new time setting is needed.

- Leave used batteries and accumulators in adapted containers that you can find in some retailers. In that way, metals don't pollute the environment and the health.
- Battery has to be inserted by respecting the polarity show on the apparel and the battery. An incorrect positioning can damage the apparel, cause leaking and even provoke fire and the explosion of the battery.
- To assure a good functioning, battery has to be in a good condition. If there is a problem, put new battery.
- Never try to recharge battery not made for this. It could leak, warm up, cause fire or explode.
- Replace all the battery at the same time. Never mix up alkaline battery with saline battery.
- Used battery has to be removed.
- Also, remove the battery if you're not using the apparel for a long time.
- Never try to short-circuit the terminal of a battery.
- Never throw away the battery in fire because they can explode.
- Take out the accumulator from the apparel before reload it.
- We recommend that an adult watch if a child change the battery to respect those rules.
- If you swallow a battery, go immediately to your doctor or the hospital.
- For the best ongoing performance, we recommend using only fresh, high-quality, alkaline batteries.

Imported by CAPTELEC, 24 RUE DE MARCO, 59290 WASQUEHAL, France



CAPTELEC - FRANCE
59 290 - Wasquehal