


Mini FM Radio

Art. No.: 29146

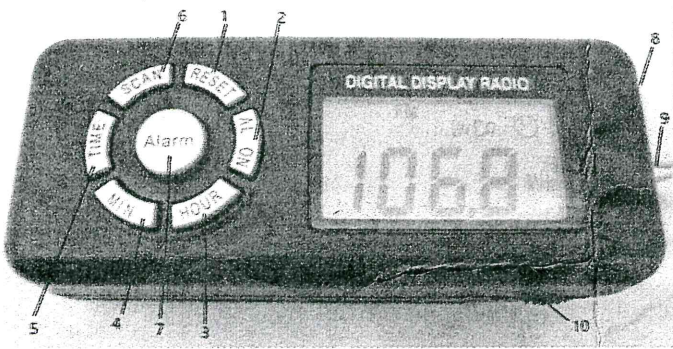

1. RESET
2. ALARM ON
3. HOUR
4. MIN
5. TIME
6. SCAN
7. ALARM
8. EARPHONE JACK
9. HANGER HOOK
10. SWITCH/VOLUME CONTROL

Specifications:

- FM auto scan radio
- with LCD display and earphone
- with time display and alarm clock
- Frequency:FM88~108MHz
- 2 x 1.5V AAA batteries (not included)


Battery installation:

Open the battery cover and then insert 2 pcs AAA batteries into battery compartment.

Time setting:

1. Turn off the radio.
2. Press "TIME" button with your one hand and then press "HOUR" button with another hand to adjust the hour.
3. Press "TIME" button with your one hand and then press "MIN" button with another hand to adjust the minute.

Alarm setting:

1. Turn off the radio.
2. Press "Alarm" button with your one hand and then press "HOUR" button with another hand to adjust the hour.
3. Press "Alarm" button with your one hand and then press "MIN" button with another hand to adjust the minute.
4. Press "AL ON" button to set the alarm on, the signal  will show on the screen, press "AL ON" again, the alarm will be off, when the alarm ring, press "AL ON" to close the alarm.

Operation:

1. Turn on the radio by turning the volume control button and adjust the volume to the required level.
2. Press the "RESET" button and then the "SCAN" button.
The frequency will be scanned from 88MHz to 108MHz.
When the frequency reaches 108MHz, press the "RESET" button to set the frequency back to 88MHz.
3. Use the earphone to listen to the radio.

When the sound becomes weak or distorted, the batteries may need to be replaced.

WARNING!

Be sure the polarities of the batteries are inserted correctly.

Do not mix alkaline and rechargeable batteries.

Do not mix old and new batteries.

Remove exhausted batteries from the radio.

DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH
Elisabeth-Selbert-Straße 3
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany 0180 . 530 63 63* or info@eurotops.de

in Austria 01 . 230 60 43 12 or info@eurotops.at

in Switzerland 044 . 28 36 125 or info@eurotops.ch

in the Netherlands 026 . 37 36 333 or info@eurotops.nl

in France 0892 . 700 470** or info@eurotops.fr

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 22.11.2016