

RCC WATCH

PRODUCT DESCRIPTION

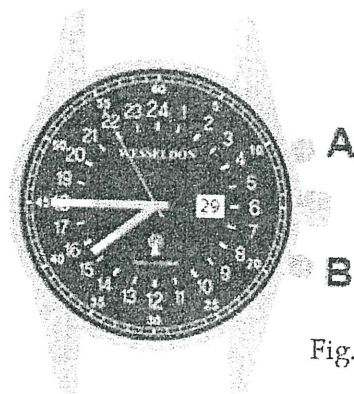


Fig. 1

FEATURES

- DCF Radio controlled signal reception
- Automatic reception of radio control signal twice a day: 2:00 AM and 3:00 AM
- 24 hour time format display

Note: 1. Only set the time by manual operation if you have to do the RESET procedure.
2. Don't add any stopper to the crown when you don't use the watch.

MANUAL TIME SETTING

Press button B firmly to enter RCC mode, the second hand will move forward and stop at 2 o'clock.
Receiving time lasts between 2 to 20 minutes.

DO NOT MOVE THE WATCH OR TOUCH THE CROWN OR BUTTONS WHEN IT IS IN RCC MODE!

If it fails to set the right time, renew the operation to enter RCC mode (refer to RESET procedure).

Note:

For the best possible reception, position your watch near a window in an upright manner, with the dial facing the window (see figure 2) or outdoors.

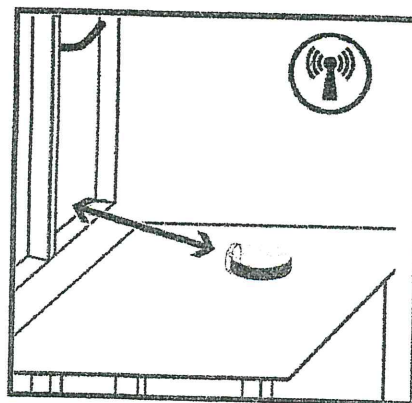


Fig. 2

The signal cannot be received for the following reasons:

- near high buildings;
- near a built up area;
- in an area outside the radio signal coverage area;
- near electronic or electrical equipments such as TV, wireless radio, mobile phones and computer which may cause undesirable signal interferences;

- near sources of magnetism or electro-magnetism;
- near heat sources;
- in conditions of bad weather.

AUTOMATIC SIGNAL RECEPTION

The watch will automatically switch to RCC mode at 2:00 AM and at 3:00 AM every day. Signal is always good in the nighttime. If your watch can't get signal in daytime, just leave it nearby a window where signal is strong overnight to get radio signal.

Note: Proceed as below to see the state of signal reception

1. Press button A once firmly, the second hand will turn rapidly, then will stop two or three times during a few seconds, and point and pause at 24H or 12H.
2. After about 2 minutes, the second hand will start to move again.


Note: If the second hand points at 24H, the RCC signal has been successfully received. If it points at 12H, it has failed to receive the signal.

RESET



To ensure successful completion of reset procedure, the three hands should point to 24H. Repeat procedure several times until they all point to 24H.

If the watch fails to set itself correctly but RCC signal status has been successfully received. Reset your watch by proceeding as below:



- 1 Pull out the crown to position 1, turn the crown clockwise to set the day to yesterday.

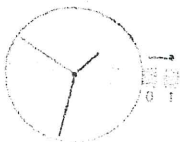

- 2 Pull out the crown to position 2, the second hand will stop turning. Then turn the crown anticlockwise until the day turns to today's date exactly. Then continue to turn the minute hand until it points to just before 24 H

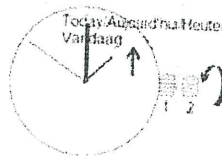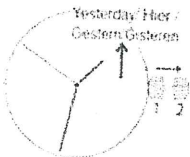

- 3 Press back the crown to position 1, the second hand will start to turn. Turn the crown anticlockwise until the hour hand points to 24H. If the hour hand already points to 24H, then you can directly refer to step 4

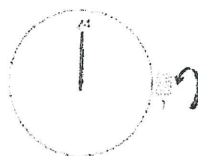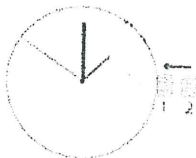

4. Once the second hand points to 24 H, pull out the crown to position 2, the second hand will stop moving.
5. Now all the hands point to 24 H, push the button A once, then push the crown back to position 0, the second hand will start to turn quickly.



6. When the second hand turns normally, press button B firmly to enter RCC mode and wait 20 minutes at least without moving the watch or touching its crowns and buttons. The watch will receive the signal and set to the right time.

SPECIFICATIONS

- 1 x lithium CR2016 battery, 3V
- 2 ATM

If the second hand isn't spinning normally or if all hands stop at 24H, change the battery.

WARNING

- Always make sure the crown is fully return to the case to ensure water resistance.
- DO NOT operate the crown or buttons in water or when the watch is wet.
- To prolong the appearance of your watch, avoid contact with the following : Perfumes, hairspray, cosmetics, detergents, adhesives and paints as they cause discoloration, deterioration and damage.
- To help prevent possible damage from perspiration, dust and moisture, periodically wipe your watch with a soft dry cloth.
- To ensure lasting durability please take note of the following points: Never attempt to open the case of your watch. Batteries should be replaced by a qualified technician.
- Your watch is shock resistant, however please be careful not to drop or hit your watch against hard surfaces, as this will cause damage.



WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

Imported by PRODIS SAS, 1 Rue de Rome, 93110 Ronsy-sous-Bois, France
 Marketed by EUROTUPS VERSAND GMBH D-40764 LANGENFELD, Germany
 Made in PRC

