


Instruction Manual

I. PRODUCT DESCRIPTION

Analog-Digital Watch

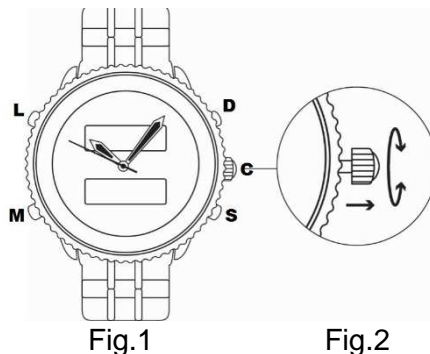

S Button: Set/Reset

L Button: Backlight

M Button: Mode

D Button: Start chronograph/scroll through values in ascending order

*** Before Use: First remove the plastic stop and push the crown (C) fully into the watch.**

FEATURES

- 1 pcs 3V CR2032 button cell for the LCD display.
- 1 pc 1.55V SR626SW button cell for the movement.
- 1 ATM.

II. USE

A. SETTING ANALOG TIME

- Pull the crown (C) to position 2 (see fig. 2) and rotate it counter-clockwise to set the time.
- Push the crown back to position 1 (see fig. 1) to confirm and finish setting the time.

B. BUTTON FUNCTIONS

ALARM FUNCTIONS

A. Activating/Deactivating the alarm and chime

In real-time display mode:

- Briefly press the "M" button twice to enter set alarm mode.
- Press the "D" button once to activate the alarm. "ALM" is displayed.
- Press the "D" button a second time to activate the chime. "CHM" is displayed.
- Press the "D" button a third time to activate both the alarm and the chime. "ALM" and "CHM" are displayed.
- Press the "D" button a fourth time to deactivate them. "ALM" and "CHM" are no longer displayed.

In alarm mode:

- Briefly press the "M" button twice to enter set alarm mode.
- Briefly press the "S" button once and the hour digit will flash, press the "D" button to set the alarm's hour digit.
- Briefly press the "S" button again and the minute digit will flash, press the "D" button to set the alarm's minute digit.
- Press the "S" button a third time to confirm the alarm's setting.

SETTING THE DIGITAL DISPLAY'S DATE AND TIME

In real-time display mode:

- Press the "M" button three times to enter set date and time mode.
- The second digit will flash, press the "D" button to reset it to zero.
- Press the "S" button, the hour digit will flash, press the "D" button to set the hour digit.
- Press the "S" button, the minute digit will flash, press the "D" button to set the minute digit. NOTE: The time is displayed in either 12h or 24h format. Press the "D" button to select the 12h AM/PM format ("PM" is displayed) or the 24h format.
- Press the "S" button, the month digit will flash, press the "D" button to set the month digit.
- Press the "S" button, the date digit will flash, press the "D" button to set the date digit.

- Press the "S" button, the days of the week display will flash, press the "D" button to set the day of the week.
- Press the "M" button to confirm and exit set date and time mode.

CHRONOGRAPH FUNCTIONS

In real-time display mode:

- Briefly press the "M" button once to enter "chronograph" mode.
- Briefly press the "D" button to start the chronograph.
- Press the "D" button again to stop/restart/stop the chronograph as many times as you want.
- Press the "S" button to reset the counter to zero after having stopped the chronograph.

In chronograph mode:

Press the "D" button:

- once to start the stopwatch;
- a second time to stop the stopwatch;
- a third time to start the stopwatch again from where it stopped.

Press the "S" button:

- once to start the stopwatch;
- a second time to stop the stopwatch;
- a third time to restart the current timer, as it will continue to count in the background even when stopped.

NOTE

- In chronograph mode, "ST" means "Start" when you start the stopwatch, "SP" means "Stop" when you stop the stopwatch.
- The chronograph's display range is limited to 23 hours, 59 minutes and 59.99 seconds. When it reaches this limit, it restarts from zero.
- If you press the "M" button, the chronograph will continue to count in the background, in order to display the current time. Press the "M" button again to return to chronograph mode.

BACKLIGHT FUNCTIONS

- Press the "L" button once to turn on the backlight for 3 seconds in any mode.

WARNING

- To ensure a waterproof seal, always make sure that the crown has been pushed back into the normal operating position.
- DO NOT USE the crown or any other buttons underwater or when the watch is wet.
- To maintain the aesthetic appearance of your watch, avoid contact with perfumes, nail polish, varnish, cosmetics, cleaning products, adhesives, and paint, as they can cause discoloration, deterioration and damage.
- To prevent any risk from perspiration, dust and humidity, regularly wipe your watch with a soft, dry cloth.
- To ensure the longevity of your watch, please observe the following instructions: Do not attempt to open the watch casing. The battery must be replaced by a qualified person.
- Your watch is shock-resistant. However, to avoid damage, make sure you do not drop or hit it against hard surfaces.

WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.



This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

Imported by EUROtops Versand GmbH, Elisabeth-Selbert-Str.3, D-40764 LANGENFELD, Germany

Made in the P.R.C

