


## INSTRUCTIONS

- 1 - Attach the handlebar mount to the handlebars using the rubber strap, ensuring that it is securely fastened .
- 2 - Attach the trigger on the handlebars in a position where it can be pressed while operating the brake at the same time (see diagrams above for suggested set ups)
- 3 - Wind the excess connecting wire around the handlebars. For best results on a road bike run the connecting wire under the handlebar tape.
- 4 - Attach the Hornit dB140 by sliding it into the mount. Remove it by pinching the release catches and sliding the Hornit dB140 out.
- 5 - Insert the connecting plug fully and firmly into the socket
- 6 - To operate press the trigger
- 7 - To change the sound press the sound selection button at the rear of the unit.

## FITTING AND REPLACING BATTERIES

The Hornit dB140 uses 2 x AAA 1.5V batteries. Unscrew the screws and lift the battery cover. Replace the old batteries with two new AAA batteries, ensuring correct polarity. Replace the battery cover and tighten screws.

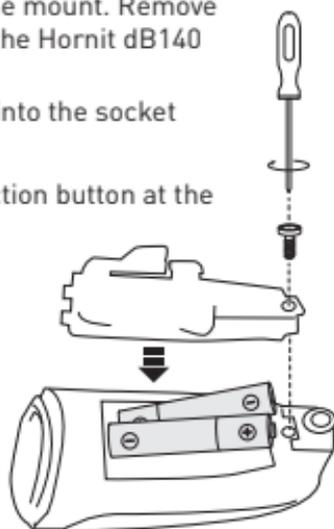

## IMPORTANT

- Do not recharge non-rechargeable batteries.
- Remove rechargeable batteries from product before recharging.
- Only charge rechargeable batteries under adult supervision.
- Do not mix different types of batteries or new and used batteries
- Only batteries of the same or equivalent type are to be used.
- Batteries are to be inserted with the correct polarity.
- Remove exhausted batteries from the toy.
- Do not short circuit the supply terminals.
- Remove batteries if the product is not used for some time.
- Used batteries and broken electrical and electronic products must be disposed of at an approved collection

# HORNIT

## dB140

### USING THE MINI HORNIT

Please read in FULL before use.

Water can ingress via the battery cover and the socket where the connecting plug inserts. The Hornit dB140 has an Ingress Protection rating (IP) rating of IP44. This means it will work normally in extreme wet weather conditions. Do not submerge. The Hornit dB140 is designed for emergency use to prevent accidents and to be heard by drivers of other vehicles. Please use it responsibly.

### WARNINGS

Warning! This product is not a toy and is not suitable for children. Warning! Keep out of reach of and do not use near children or animals. Warning! Prolonged exposure or incorrect use may cause permanent hearing damage. Do not use in confined spaces or near people's ears. Warning! Ensure the Hornit dB140 is mounted correctly and securely, facing away from the rider.

### LIABILITY

The manufacturer and its agents accept no responsibility or liability for death or personal injury except where proved to be as a result of the negligence of the manufacturer or its agents. The manufacturer and its agents accept no responsibility or liability for damage to property or any other loss sustained as a result of possession of or use of the product whatever the reason or cause, to the fullest extent permitted by law.

### WARRANTY

All Hornit products are warranted to be free from defects in materials and workmanship for a period of 12 months from the date of purchase. The warranty applies only when the product is used as intended, under normal conditions and does not apply to damage caused by wear and tear, accidents, corrosive substances, water, misuse or neglect. In all cases the warranty is limited to the value of the product. This does not affect your statutory rights.



[www.minihornit.com](http://www.minihornit.com)

Designed in the UK

Made in Dongguan, Guangdong, China

Bullet Ventures Limited, 92 Westfields Avenue, London, SW13 0AZ, UK. 2013