



#45375 - Rechargeable Power Flashlight “Multi-Action”

User Manual

Includes:

- 1 x Torch with lighter,
- 1 x USB COB booklight,
- 1x USB fan,
- 1 x USB cable,
- 1x plastic box

SPECIFICATIONS:

- Extra Heavy-duty Aluminium Casing
- Bright LED 5W 450 Lumen
- Rotate head for Zoom function
- A concealed ignition, Push-up the lighter switch can ignited immediately
- Built-in rechargeable Li-ion Battery 18650 3.7V 2000mAh
- 3 Beam Modes: High, Low, Flash
- USB charging input DC 5V with indicator and power-bank function USB Out DC5V 1A
- USB 2w COB book light
- USB Mini Fan
- Charging time: 3 to 5 hours
- Run time: 5-8 hrs
- Weight incl Battery: 350g

Avoid direct eye exposure or serious eye injury could result. To prevent damage to eyesight, never look into light when it is on. Do not shine in any face. This item is not a toy. Keep out of reach of children.

Charging:

Directly plug in provided Micro-USB-cable to an USB power source to charge.

A light under the switch rubber button will show blue flash when charging and green when full.

Charging time takes 3 – 5 hours depending on the rating of the USB charger. Recharging is easy and safe as the battery cannot be overcharged. The charger will stop charging once full.



Operation:

1. For LED flashlight function (4 Modes):

Press switch in turn: **High light- Lowlight- Flash light-Off**

Rotate head for Zoom function

2. For lighter function:

Push-up the side lighter switch can ignited immediately (Auto off after 10 seconds), Released switch can autoretraction



Push-up the lighter switch ignited immediately

3. For Power-bank function (USB output DC5V)


Just plug into USB-Out your electronic device. The maximum output is DC5V.



Accessories:

Plug-in USB-booklight

To use the included reading light, simply plug it into the USB port in the base of the flashlight. By turning the flashlight upside down, you can easily set up the reading lamp and align it afterwards.

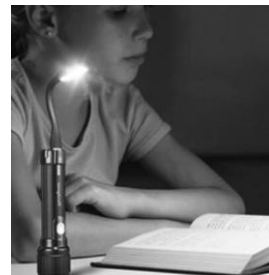

Plug-in USB-fan

To use the supplied fan, simply plug the attachment into the USB port in the base of the flashlight. By turning the flashlight upside down, you can easily set up and align the fan. The silicone rotor blades stop as soon as an object comes between them.

Maintenance:

All batteries lose charge over time. It is recommended that the flashlight should be fully recharged every 2-3 months when not in use.

ATTENTION!!!

The returns will be impossible if products were damaged because of incorrect use.

DISPOSAL :

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH
Elisabeth-Selbert-Straße 3
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany 0180. 530 63 63* or info@eurotops.de

in Austria 01. 230 60 43 12 or info@eurotops.at

in Switzerland 044. 28 36 125 or info@eurotops.ch

in the Netherlands 020 / 2621958 or info@eurotops.nl

in France 0892. 700 470** or info@eurotops.fr

in Belgium 070 663 665*** or info@eurotops.be

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

© 22.11.2019