


Designer men's watch - Art. No. 46031

INSTRUCTION MANUAL

Product Illustration:

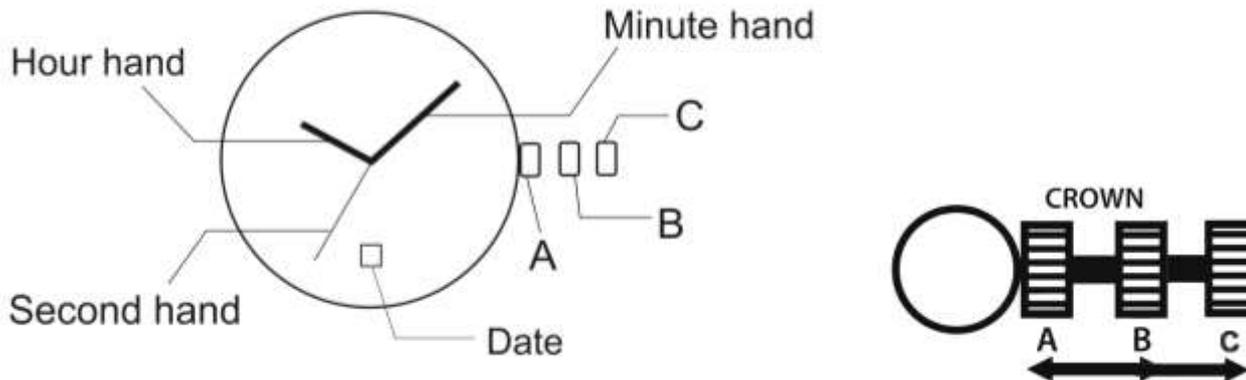

1. Pull the crown out to the "B" position, twist the crown to adjust calendar.
2. Pull the crown out to the "C" position, twist the crown to adjust time.
3. After the date or time has been set, push back the crown to the normal position "A".

NOTICE:

To make your watch work, remove the stopper which is located between the watch and the crown. Set your desired time and **push back the crown**.

DISPOSAL:

The packaging material is recyclable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recycling containers.



Dispose of the product and the batteries in an environmentally friendly fashion. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government.
Remove batteries first.

Eurotops Versand GmbH
Elisabeth-Selbert-Straße 3
40764 Langenfeld, Germany

EURO
tops

If technical support is needed, please call ...

| | |
|--------------------|---|
| in Germany | 0180 . 530 63 63* or info@eurotops.de |
| in Austria | 0720 204 001 or info@eurotops.at |
| in Switzerland | 071/27 4 68 06 or info@eurotops.ch |
| in the Netherlands | 020262 1958 or info@eurotops.nl |
| in France | 0892 . 700 470** or info@eurotops.fr |
| in Belgium | 070 663 665*** or info@eurotops.be |

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**35 Cents/minute via French landline

***30 Cents/minute via Belgium landline

A possible return of products should be addressed to the return address stated on your invoice.

© 01.08.2020