

## RECHARGEABLE TELESCOPIC LIGHTER

### INSTRUCTION MANUAL


Please read the manual before first use. Keep this manual safe for future reference!

#### WARNINGS



1. Keep away from sources of heat, direct sunlight, humidity, water or other liquids.
2. Do not operate it under high temperature.
3. Do not immerse in water or any other liquids.
4. Do not subject it to strong impacts and do not throw it.
5. Do not drop, short-circuit, modify, disassemble or puncture it.
6. It is not a toy. Keep out of reach of children and persons with reduced physical, sensory or mental capabilities.
7. In case of abnormalities (bulge, heat, etc.) during charging, disconnect USB connector, stop using it and take it to a qualified technician.
8. Do not try to repair the device. All the repairs must be made by a qualified technician.
9. Disconnect it from USB connector after completion charge.
10. Keep away from fire. Do not put into fire or expose it to environment which temperature is above 49°C otherwise it may cause an explosion.
11. Avoid prolonged sun exposure, especially in a glass case or in a car.
12. Continuous use of the lighter can cause the product to overheat.

#### PRODUCT DESCRIPTION

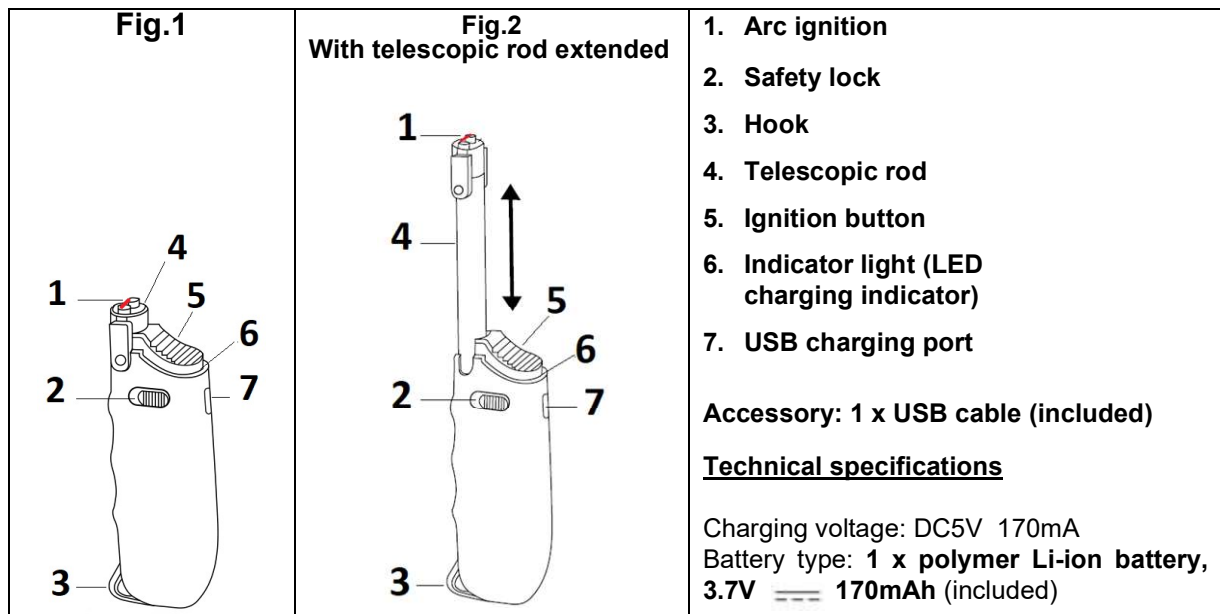

## BATTERY CHARGING

**CHARGING TIME FOR FULL CHARGE: About 1H/ 2H**

The USB lighter is delivered pre-charged and is normally ready for use. However if it needs to be recharged and for any following charging process, proceed as below:

1. Use the provided charging cable to connect the lighter to a USB port of a computer or any charging device.
2. When charging, the indicator light between the button and the outlet case turns on.
3. When the battery is fully charged, the indicator turns off automatically.

### **IMPORTANT NOTES:**

- Make sure to unplug the USB charging cable once the battery is fully charged otherwise overcharging will shorten battery life.
- **To preserve your battery, please use the device until the battery discharges totally, and charge its maximum capacity during the 5 first times of use.**
- **If the device has not been used for a long time, please fully recharge it before use.**

## OPERATION

### **A. How to use the lighter**

1. First **push the safety lock button to the right to unlock.** *Note : Make sure it is positioned on the right otherwise the ignition could not be performed if it is on the left.*
2. Press the ignition button, the arc ignition ignites.
3. Approach the cigarette close to the ignition arc.

- **NEVER touch the arc ignition to avoid burning yourself.**
- DO NOT lit continuously more than 10 seconds to avoid affecting product life.
- Be sure the arc flame has been fully extinguished after use.
- Keep away from hair, face, body, clothes and flammable materials when using.
- The lighter may be a little hot when using, it's normal.

4. When finished, release to turn it off.
5. Push the safety lock button to the left to lock the ignition function.

### **B. How to extend the telescopic rod and use the lighter**

1. First push the safety lock button to the left to unlock the rod.
2. Extend the rod at its maximum.
3. To use the lighter, push the safety lock button to the right.
4. Repeat steps 2,3 and 4 of section A : How to use the lighter.
5. After use, push down the rod. Always make sure the the safety lock is to the left position to lock ignition function.

## SAFE INSTRUCTIONS FOR BATTERY



### ATTENTION

- Lithium-ion batteries can easily rupture, ignite, or explode when exposed to high temperatures, or direct sunlight.
- Do not disassemble or modify the battery. The battery contains safety and protection devices, which, if damaged, may cause the battery to generate heat, explode or ignite.
- Since the battery cannot be removed from the product, please dispose of the product together with battery safely in the collection points intended for disposal of this kind of product. Make sure that the battery has been completely discharged before disposing of the product.

## MAINTENANCE

- Clean only with a dry cloth.
- It is important that no liquid reaches the inside of the unit.

**STORAGE:** Store the product in low temperature, dry and ventilated place.



**WARNING:** You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled. This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.



Imported by EML – Trading name: Prodis 1 rue de Rome 93110 Rosny-sous-Bois-France/ Made in PRC  
Marketed by EUROTOPS VERSAND GMBH D-40764 LANGENFELD