

DENVER[®]

BTG-408


INSTRUCTION MANUAL



Please read this instruction manual carefully before using, and keep it for future reference.

www.denver-electronics.com

Product Overview

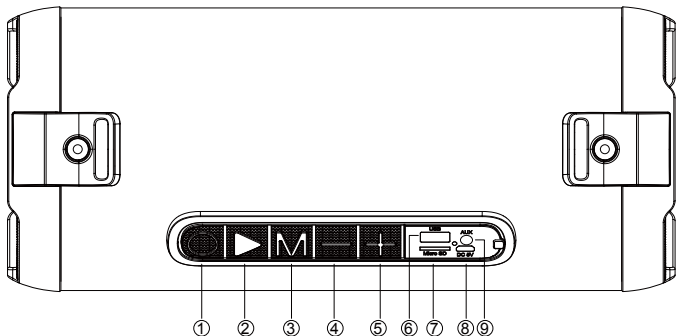

- 1.Power On/Off
- 2.Play/Pause Button
- 3.Mode Button
4. Backward/Volume down
5. Forward/Volume Up
6. USB port
7. Micro SD slot
- 8.Charging port
- 9.AUX IN

Charging

There are two ways to charge the speaker.

1. Plug the USB charging cable into speaker and connect to another USB power source like PC/MAC, etc.

2. Use the AC adapter to charge (not included).
Please turn off the speaker when charging.

Indicator Status

Type	Indicator	State
Bluetooth indicator	Rapid flashing blue	Ready to link
	Slowly flashing blue.	Linked
	Blue	AUX-in mode
Battery indicator	Red light normally on	Charging
	Red light off	Fully charged

Connecting

Bluetooth connection

Long press Power button to power ON.

The speaker BT indicator will flash in blue

Search the Bluetooth device on your cellphone, select "BTG-408" in the list
BT indicator will slowly flashing blue after the speaker is linked to the phone.

Media files supported via USB/Micro SD card reader: MP3、wav、wma

TWS function – pair two speakers by long press Pause button to get a stereo set.

FAQ:

1. Unable to turn on the speaker
Make sure the battery is full and the battery indicator light is on.
2. Unable to connect to BT-enabled device
Make sure that the device is in BT mode, and is within 10 meters from the speaker.
Ensure that neither the speaker nor the device is blue-connected to any other devices.
3. No sound heard
Please turn up the volume.
4. The speaker has no response
Please power off and try again.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

DENVER®

www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Frequency bands: 2402-2480MHz

Maximum output power: 4dBm

DENVER ELECTRONICS A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.facebook.com/denverelectronics

Hereby, Inter Sales A/S, declares that this model DENVER BTG-408 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Please enter: www.denver-electronics.com and then click the search ICON on topline of website. Write modelnumber: BTG-408

Now enter product page, and red directive is found under downloads/other downloads

Warning: Lithium battery inside