


LED Dynamo Torch with FM Radio

Product specifications

LED LAMP	
Illuminants	3 bright, white LEDs with 12,000 MCD luminous intensity each
LED lifespan	50,000 hrs.
Light switch	On/Off
FM RADIO	
Antenna	Integrated in wrist strap
Controls for the radio	On/off and volume rotary switch, scan and reset button
Audio output	With integrated loudspeaker
Channel search	Automatic
Radio frequency range	FM 88 - 108 MHz
Number of channels	4 - 6 channels receivable
GENERAL INFORMATION	
General functions	Hand crank torch with FM radio
Power source	Rechargeable 3.6 V / 40 mAh Li-Ion battery pack
Power generation	By operating the hand crank
Hand crank	In/out foldable and rotatable
3 - 5 minutes cranking	Gives 15 - 20 minutes of light or 15 minutes of radio time
Continuous operating time	2 hours
Housing material	Plastic
Product size	115 * 55 * 45 mm
Net weight	Approx. 100 g

Instructions for use

- Torch: To switch on the 3-LED torch, press switch "A" forward. To switch it off, press the switch "A" back again.
- Radio: To switch on the radio, turn the knob "B" clockwise until you hear a "click". Continue turning the same knob to adjust the volume to the desired level. To switch off, turn the rotary knob anticlockwise until a "click" is heard. Press the "Scan" button to tune in a radio station. The radio searches for the next free FM station. Press the "Scan" button again to switch to the next FM station. To return to the beginning of the FM range, press "RESET" and then "SCAN". There may be a short delay during resetting. The antenna for the radio is integrated in the wrist strap.

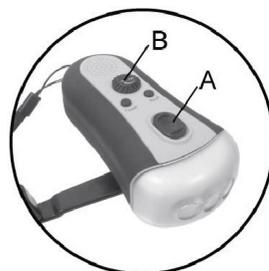

Charging the battery

Before charging, make sure that the radio and the torch are switched off.

Turn the crank for at least two minutes with fast and steady movement.

Two minutes of cranking will give approximately 15 - 20 minutes of light or 15 minutes of radio time.

Switch off the unit when not in use or when the battery is empty. Otherwise, longer cranking may be required to achieve the above operating times.

Maintaining the battery quality

Charge the battery either immediately after use or as soon as the power of the torch/radio becomes weak. Charge the unit regularly even when not in use to maintain battery life (at least once every three months). In general, please make sure to switch off the radio and the torch when the power is used up. Otherwise, this may shorten the life of the battery.

Warnings

- Make sure the torch and radio are switched off when not in use.
- Do not point the light directly into the eyes.
- Make sure the torch and radio are switched off when charging.

Disposal instructions

This product contains a rechargeable 3.6 V / 40 mAh battery. It should be removed before disposing of the unit. To access the battery, remove the four screws and remove the main casing.

Help the environment by disposing of your product and battery responsibly. The dustbin symbols indicate that the product and batteries must not be disposed of with household waste, as they contain substances that may be harmful to the environment and human health. Please use the designated collection points or recycling facilities to dispose of the product or the battery.